



## Server Installation

Micro Estimating is designed to run with Microsoft Windows 2007 and above.

The best installation method is to first install the software from the network file server desktop. This will update any outdated system files on your file server.

Network clients will then be installed from the network share which will properly set shortcuts and data folders. A properly setup Micro Estimating installation will have the MSEWIN folder located on your network file server ONLY, this folder should NOT exist on client drives.

**If you are upgrading from a previous version, it is recommended that you back up the entire MSEWIN folder on your file server before installing the upgrade.**

To install the Micro Estimating server software, from the server desktop, use Windows Explorer to browse to your DVD or download folder, right click on **setup.exe**, and select **Run As Administrator** (or open for older versions of Windows).



Select 'Sever Setup' from the menu and follow the instructions that appear.

**For new installations, install into the default MSEWIN folder on a network shared resource.**

**For upgrades, install into the existing MSEWIN folder.**

## Desktop Client Installation

On each Micro Estimating client, use Windows Explorer to browse to the msewin\program\client folder on the server, right click on **setup.exe**, and select **Run As Administrator** (or Open for older versions of Windows). Desktop and Start Menu shortcuts will be created.

## Terminal Server Client Installation

For Terminal Server/Citrix clients, install the Micro Estimating client on one terminal server desktop and copy the Micro Estimating start menu and desktop shortcuts to the other user profiles (or to the All Users profile).

## License Installation

You may have received one or more USB license devices. If you purchased individual client license devices, simply connect the USB device to your client computer. If you purchased a network-based floating license, connect the USB device to your server computer, or any computer in the network that will be online when a license is needed. To install the driver for this device, browse to \\servername\msewin\program\drivers\sentinel\server\setup.exe and right click, Run as Administrator and follow the prompts. If you are prompted to modify the Windows firewall, to open UDP ports 6000 and 6001, you must allow this modification. When complete, run Micro Estimating on any client computer, and on the login screen click Utilities, Set License Server to specify the computer that you installed the license and driver on.

## Automatic Feature Recognition Setup

If you have a Micro Estimating license for AFR (Automatic Feature Recognition) estimating, start Micro Estimating on each client. From the menu select Setup, Install Feature Recognition Client. Windows Explorer will open the Feature Recognition installer folder on the server, right click on the appropriate setup program and select Run As Administrator (or Open for older versions of Windows) and follow the on-screen prompts. For 3d model CNC Lathe and CNC Mill estimating, install CAMWorks x64. For 2d Laser, Plasma, OxyFuel, Waterjet, and Turret Punch estimating, install ProCAM